


**Wichtig:**

Bitte lesen Sie diese Anleitung vor der ersten Bedienung aufmerksam durch und beachten Sie vor allem die Sicherheitshinweise. Schäden, die durch Nichtbeachtung der Bedienungs- und Wartungsanleitung entstehen, unterliegen nicht der Gewährleistung. Bewahren Sie dieses Dokument bis zur Entsorgung gut auf bzw. geben Sie es beim Verkauf mit. Es enthält auch Hinweise zur Wartung und Instandsetzung.

**Bedienhinweise für das Insektenschutzgitter Rollo**

**Insektenschutzgitter Rollo einrasten**

Endstab des ISG gleichmäßig und langsam ziehen. Endstab rastet automatisch ein. Zum Herunterziehen die Zugschnur am Endstab zur Fenstermitte verschieben oder Endstab direkt über Griffmulde mittig nach unten bewegen.

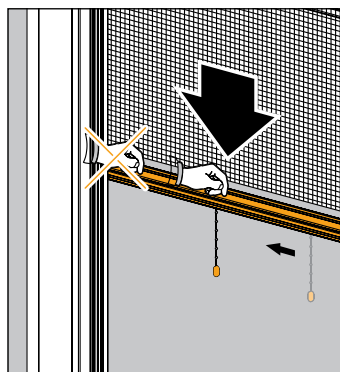


**Insektenschutzgitter Rollo ausrasten**

Das Ausrasten des ISG erfolgt durch kurzes Drücken des Endstabes nach unten (1). ISG-Endstab rastet automatisch aus.


Bei breiteren Fenstern den Endstab beidhändig bedienen und ausrasten lassen.

Das ISG fährt selbstständig hoch.

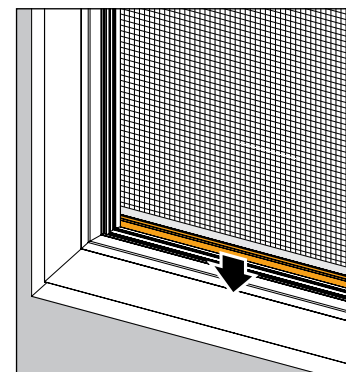


**Insektenschutzgitter Rollo einrasten bei breiten Fenstern**

Bei breiten Fenstern den Endstab beidhändig mit gleichmäßiger Kraft nach unten ziehen und einrasten lassen. Durch eine einseitige Bedienung kann auch eine Schrägstellung des Endstabes in der oberen Endlage entstehen.

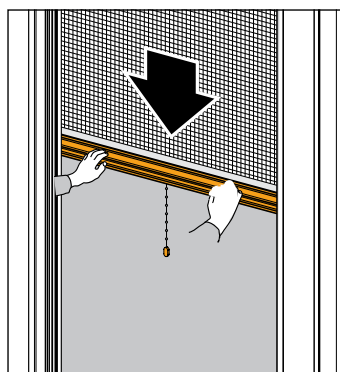

**Bedienung Insektenschutzgitter bei Kälte und Frost**

**Hinweis:** Bei niedrigen Außentemperaturen kann es zu einer Verstärkung der Bremskraft durch abnehmende Viskosität des Gels in der Bremse kommen.

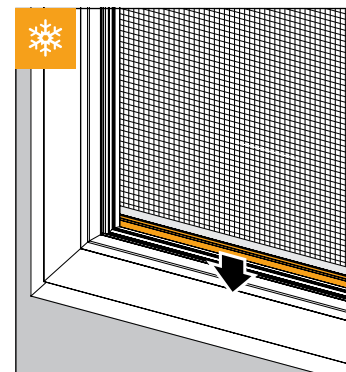


**Wartungs- und Pflegehinweise für das Insektenschutzgitter Rollo**

**Wartungshinweise für ISG Rollo**

Untersuchen Sie den Insektenschutz regelmäßig auf Anzeichen von Verschleiß und Beschädigung. Die Inspektion oder Wartung muss von Fachbetrieben durchgeführt werden. Nur Originalersatzteile verwenden.


**Hinweis:** In jedem Fall die beschriebene und dargestellte Bedienung des ISG einhalten, da bei falscher Bedienung das Gewebe beschädigt werden kann.

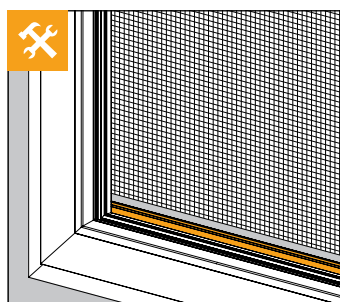

**Pflegehinweise für ISG Rollo**

**Abstauben:** Benutzen Sie eine weiche Bürste oder einen weichen Lappen und streichen Sie mit leichtem Druck über das Insektenschutzgitter.

**Reinigung:** Hierzu benutzen Sie bitte nur mildes Seifenwasser mit einem weichen Tuch. In keinem Fall Lösungsmittel, scharfkantige Gegenstände oder raue Bürsten.

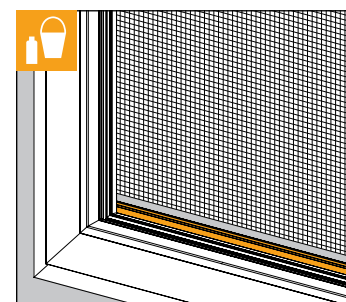

**Important:**


Please read this manual carefully before the product is operated and follow all safety instructions. Damages caused by inobservance of this operating and maintenance manual are not subject of warranty. Please keep this document until final disposal respectively hand it over in case of resale. It contains instructions for service and maintenance.

**Instructions to operate the insect screen**

**Snap in the insect screen**


Pull the end bar of the insect protection screen slowly and consistently. The end bar will snap in automatically.

To pull the screen down move the pull cord of the end bar to the centre of the window or move the end bar down using the centrally grip.

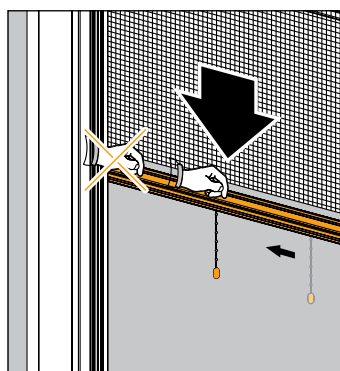


**Disengaging the insect screen**

To disengage the insect protection screen press the end bar down (1). The end bar of the insect screen will disengage automatically. For wide windows, handle and unlatch the bottom rail using both hands. The insect screen will move up automatically.

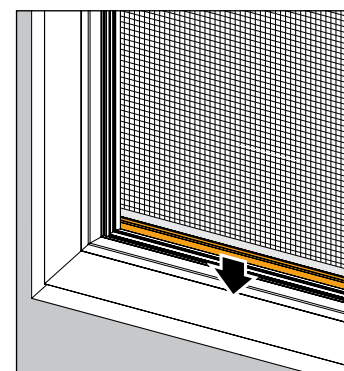


**Snap in the insect screen on wide windows**

In case of wide windows pull screen gently down using both hands and snap it in.

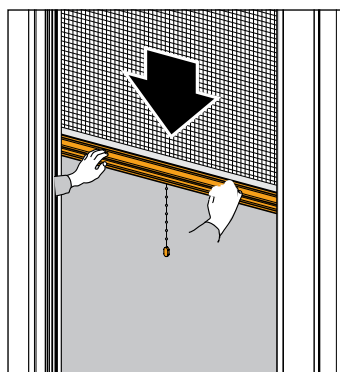

**Operation of insect screen with coldness and freeze**


**Tip:** Low temperature outside could cause an enhancement of braking force by reducing of viscosity of gel in brake.

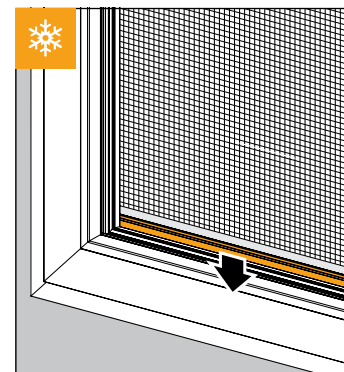

**Service and maintenance instructions for the insect screen**

**Maintenance instructions for the insect screen**

**Tip:** Operate the insect protection screen in any case according to the described instructions. Mishandling may result in damaging the screen and the screen may come off the guiding rail. Operating it one-sided may result in a slanted position of the end bar at the upper end.

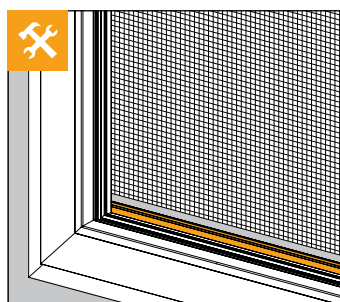

**Care instructions for the insect screen**

**Dusting:** Use a soft brush or a soft cloth applying gentle pressure across the screen.

**Cleaning:** Please use mild sudsy water with a soft cloth. In no case use solvent, objects with sharp edges or scrubbing brushes.

